

ANDREWS WATER HEATERS

TECHNICAL DATA SHEET

CI/SfB
(53.5) Xh
JUNE 2007

T/ D 055

NATURAL GAS FIRED STORAGE WATER HEATERS

External wiring connections for RFF190 and RFF280 fitted with BEMS / fault indication. Part number B288

WARNING - Isolate electrical supply before commencing work.


The remote warning provides a no-volt switching connection for

- No flame indication
- Gas supply interruption
- Fan failure


Connect the BEMS / warning system to terminals 4, 5 or 6 as below.
Maximum current 10 Amps 240 volts.

Contacts 5 - 6 are normally open and close if any of the above faults occur and the lockout light is illuminated.
Contacts 4 - 6 are normally closed and open if the above faults occur and the lockout light is illuminated.
Press re-set button to re-start the heater, if the heater fails to start refer to the operation and service manual.

NB Andrews part number for replacement Honeywell control is E797

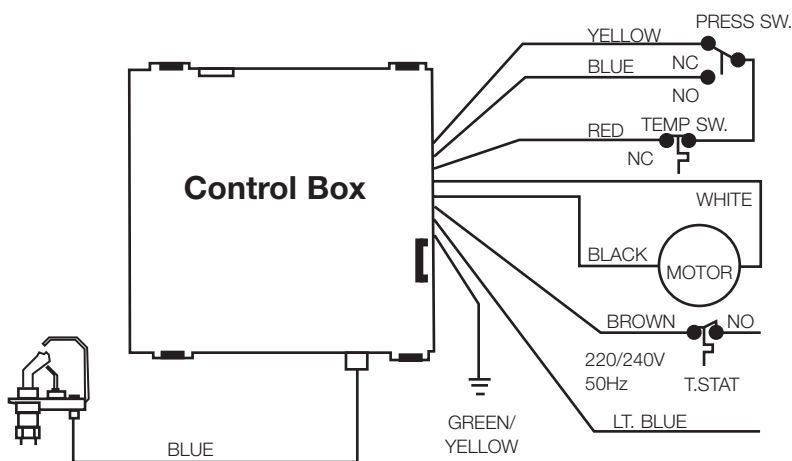

Re-set button Lockout light

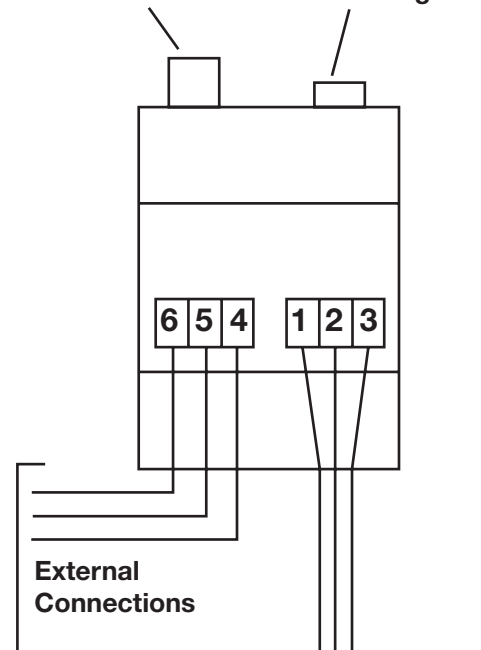

Control Box
Terminals

1	BLUE
2	ORANGE
3	
4	WHITE
5	YELLOW
6	BLUE
7	RED
8	WHITE
9	BLACK
10	BROWN
11	LT. BLUE
12	GREEN/YELLOW



Andrews Water Heaters
Wood Lane, Erdington
Birmingham B24 9QP
Tel: 0845 070 1055 Fax: 0845 070 1059 Sales: 0845 070 1056
Technical: 0845 070 1057 Service: 0845 070 1058
E-mail: andrews@andrews-waterheaters.co.uk
www.andrewswaterheaters.co.uk

T E C H N I C A L D A T A S H E E T